



West Realty

Outstanding Agents, Outstanding Results

INSTRUCTIONS FOR THE MOVING TRUCK

1. Truck must be in neutral to start. The truck does not have an electronic ignition, gas must be pumped prior to turning key over. Do not keep key cranked or it will kill the battery.
2. There is no park. Always put the truck in neutral and put on the park brake. Make sure signal lights and hydraulics are off or the battery will die.
3. Hydraulics can only be operated if truck is running or it will kill the battery. The hydraulic tailgate is available for use at your own risk. Please insure that you are shown how to use it when you pick up the truck.

Never stand in front of the hydraulic tailgate when you are releasing it to lower in case it drops down suddenly. Always stand to the side. We recommend that you run the hydraulics from the side of the truck.

4. The truck is to only have one operator. The operator must sign truck out and sign back in. When picking up the operator must provide copy of drivers license.
5. Please insure that you have significant fuel as we do not provide and please return truck with same amount of fuel as when you picked it up and provide receipts to show fuel has been topped up.
6. Use of the truck is at own risk and we make no warranties or guarantees as to running condition of truck and should truck break down or not be available for you, you agree not to hold REMAX West Realty liable for any inconvenience or extra costs, damages, theft or loss.
7. The truck is to be returned in the same state of cleanliness inside and out as delivered.

Signature of Operator